



Boveda®

BUTLER

YOUR STORAGE, SMART.

USER'S GUIDE

DOWNLOAD & OPEN APP



bovedainc.com/app

↓ BOVEDA APP 1

Download the Boveda App from the Apple App Store or Google Play.



⌘ TURNED ON 2

Make sure Bluetooth® is turned ON and you have internet connection.

For android devices, also turn Location Services ON.



OPEN APP 3

If you have an existing Boveda account tap "LOGIN".

If you are a new user tap "CREATE ACCOUNT".

LINK BOVEDA BUTLER TO THE APP

BOVEDA BUTLER & CALIBRATION KIT

4



Have your Boveda Butler and One-Step Calibration Kit ready for this process.

REMOVE PULL TAB

5



Remove the pull tab from the Boveda Butler. If the front does not have a blinking light or if the pull tab was previously removed, remove the battery & re-insert.

LINK/ADD BOVEDA BUTLER

6



From the page titled "My Valuables" tap the plus icon on the top right. Then tap "Link a Sensor".

LINK BOVEDA BUTLER TO THE APP (CONT.)

Link Complete



Link Failed



TAP CONTINUE **7**

If the Boveda Butler was able to link tap "CONTINUE".

If the Boveda Butler failed to link, remove and re-insert the battery to reset it and tap "RETRY".



CONTAINER DETAILS **8**

Enter the requested information then tap "CONTINUE".




SET UP REMINDER OR SKIP **9**

Tap "GET STARTED" to set up a reorder profile that reminds you before you run out of Boveda.

Or tap "SKIP" to see your container's quick view on the "MY VALUABLES" screen.

CALIBRATE & INSTALL BOVEDA BUTLER

Boveda Butler must be calibrated before use for accurate readings.

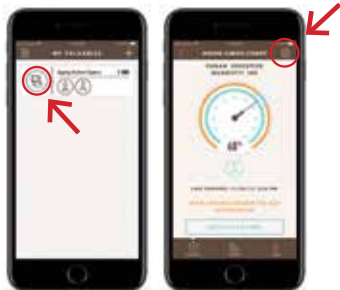

LOCATE SETTINGS PAGE 10

From the “MY VALUABLES” page tap your container on the left, then tap the gear icon in the upper right.



LOCATE CALIBRATE SENSOR 11

Scroll down to tap “Calibrate Sensor”, then tap “CALIBRATE”.



1 POINT CALIBRATION 12

Have your One-Step Calibration Kit ready and tap “Yes, 1 point”.

CALIBRATE & INSTALL BOVEDA BUTLER (CONT.)

Sensor must be calibrated before use for accurate readings.




START 13

Place the sensor inside the One-Step Calibration Kit and seal it. Tap "I'M READY, START!"

Start

Complete

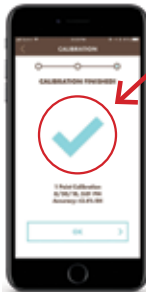

WAIT 24 HOURS 14

Calibration will continue automatically. The app will notify you upon completion.

Mounted

Unmounted



INSTALL IN HUMIDOR 15

When the sensor has completed calibration, use the Velcro® strips included to mount the sensor in your humidor or just lay it in with your cigars.

REMOTELY MONITOR YOUR VALUABLES

Want to check on your valuables while you are not home?

Set up remote monitoring using a second compatible smart phone or tablet.



The second compatible device could be a tablet or an old, unlocked smartphone you are no longer using.

(at least iOS 10.0 or Android 5.0)

SETTING UP REMOTE MONITORING



bovedainc.com/app

↓ BOVEDA APP 1

On your second device (phone or tablet), download the Boveda App from the Apple App Store or Google Play.



⌘ TURNED ON 2

Make sure Bluetooth® is turned ON and you have internet connection.

For android devices turn Location Services ON.



OPEN APP 3

Use the same login information from your first device.

SETTING UP REMOTE MONITORING (CONT.)



TURNED OFF

4

On your first or primary device, turn Bluetooth® temporarily off.



OPEN "MY VALUABLES"

5

On your second device (phone or tablet), from the "MY VALUABLES" screen, wait for the Bluetooth icon to appear in the upper right hand corner for your container.



CONNECT TO POWER

6

Connect the **second device** to a power source and leave within Bluetooth range of your Boveda Butler.

For iOS devices, the Display & Brightness settings may need to be set to "never" to keep a steady connection.



FOR TECHNICAL CONCERNS:

Email: info@bovedainc.com

Phone: 952-745-2900

Mon-Fri, 9am-5pm (CST)



@bovedainc



@bovedausa



Boveda

Find Boveda's cigar podcast **BOX PRESS** on all podcast platforms by searching **BOVEDA BOX PRESS**.